

USER INSTRUCTIONS

EM35•20-BR



fig. B





OPEN - ÖFFNEN - OUVERTURE - APERTURA

fig. A




 ADD SECOND USER - ZWEITEN BENUTZER ZUFÜGEN
AJOUTER DEUXIÈME UTILISATEUR - AGGIUNGA IL SECONDO UTENTE
AGREGUE A SEGUNDO USUARIO

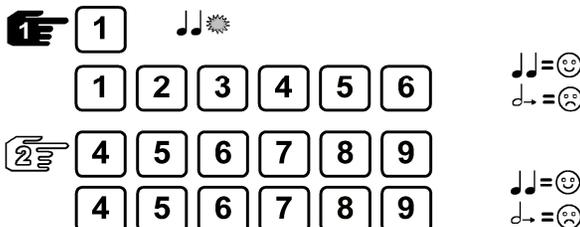


CHANGE CODE - CODE ÄNDERN - CODE MODIFICATION
CODIFICHI CAMBIARE - CIFRE CAMBIAR

fig. C

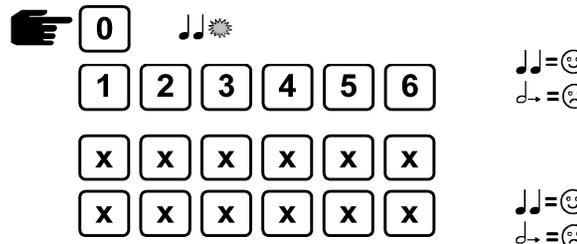

DELETE SECOND USER - ZWEITEN BENUTZER LÖSCHEN
SUPPRIMER DEUXIÈME UTILISATEUR - CANCELLI IL SECONDO UTENTE
SUPRIMA A SEGUNDO USUARIO

 fig. D



press and hold until double signal and light stays ON
gedrückt halten bis doppel-signal und leuchte AN
susbstance serrée
conservazione premuta
subsistencia presionada



The lock operates with a numeric six-digit code or a word with 6 letters. A secondary code can be added. Each key press is confirmed with an audio and light signal.

After entry of a valid code a double signal follows. An invalid entry is followed by a long signal. After 10 seconds without entry, an already started code entry is cancelled.

Open: (see fig. A)

Enter code (factory code = 1-2-3-4-5-6) and rotate the Entry Unit clockwise to open. The Entry Unit remains rotated while the safe is open. *If code entry failed on first attempt wait 20 seconds before re-entering.*

Locking:

Close door, turn boltwork handle to locked position, and rotate Entry Unit counterclockwise until keypad faces up.

Manipulation protection:

Entry of four consecutive invalid codes – keypad is blocked for 5 minutes. During this period, the light flashes every 10 seconds and any key press causes a long signal. After expiration, entry of two more invalid codes, restarts the 5 minute blocking period.

Safety reference:

All codes are to be securely stored. Do not use personal data (i.e. Birthdays, telephone numbers etc.) as the code. Change the factory code before you start using the safe!

Activate the second opening code: (see fig. B)

Press and hold Key [1] until double signal. The light remains on during the following actions.

- Enter main code.
- Enter Secondary code twice (Double signal after each)

(The secondary code can be changed like the main code. With the main code, the secondary code can be deleted. The main code cannot be deleted.)

Change code: (with safe door open, see fig. C)

Press and hold Key [0] until double signal. The light remains on during the following actions.

- Enter old code (double signal)
- Enter new code (double signal) and repeat new code (double signal)

In case of entry errors (long signal), the old code remains valid.

Delete the secondary code: (see fig. D)

Press and hold Key [3] until double signal.. The light remains on during the following action.

- Enter main code.

The secondary code is deleted.

Current supply / battery change:

A series of signals indicates that the battery is weak and must be replaced. Use only 9V ALKALINE - batteries! The battery compartment is located at the bottom of the entry unit.